


QUICK START GUIDE

MX360 & MXR331

CONNECTIONS

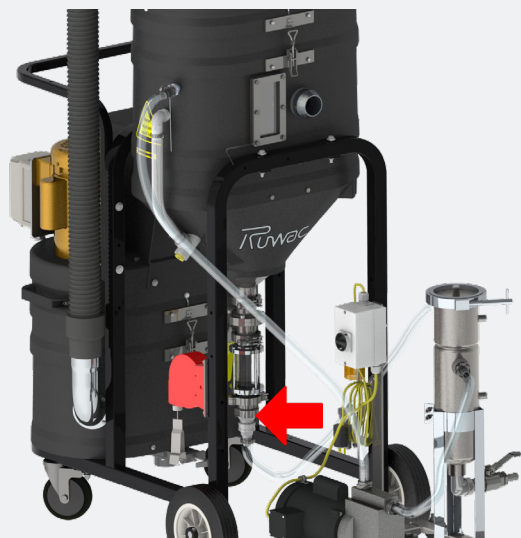

- A. Connect the MXR to the discharge port of the MX360 unit.


CAPTION WARNING:

Before turning on the MXR, please make sure the MX360 is powered off.



- B. Connect the MXR to the input liquid port of the MX360 unit.

PREPARATION

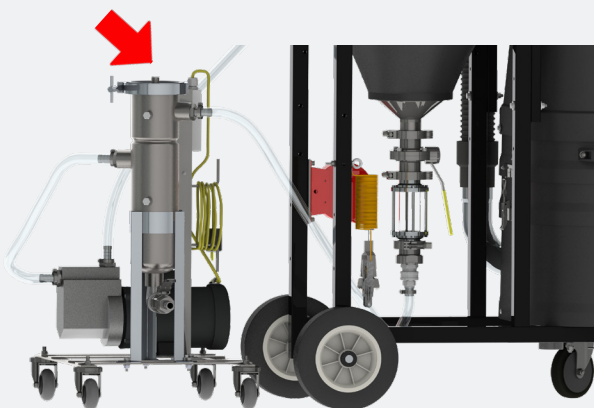

- A. Add liquid to the MXR filter housing less than (1 Gallon) to prime the pump.



- B. Insert filter to the MXR filter housing.



*Note: please ensure that the MX360 unit is on the recommended level.

*Note: please ensure that the filter is installed below the inlet liquid port and above the outlet liquid port of the MXR filter housing.


Make sure you have a new filter installed.

QUICK START GUIDE


MX360 & MXR331

CAPTION WARNING:

After inserting the filter, ensure that the top flange cover is properly closed.

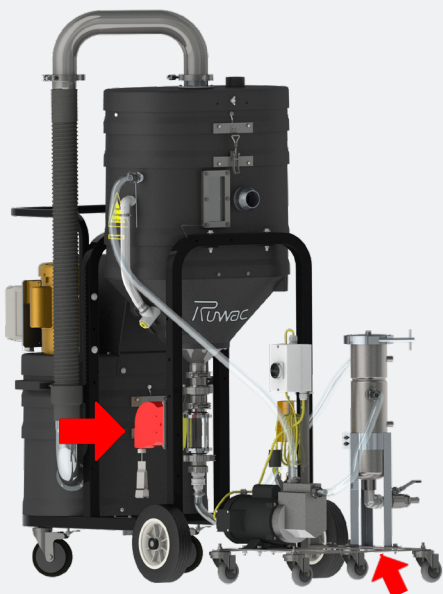

A. Connect the ground reel cable from the MX360 unit to the frame of the MXR.

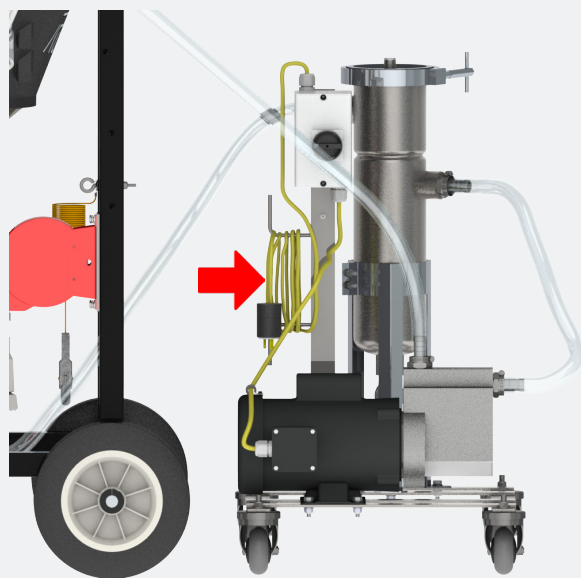

B. Connect the MXR unit to a proper power source.

FILTRATION SYSTEM EXTENDS THE SERVICE LIFE OF LIQUID ELIMINATING MAINTENANCE, DOWN TIME, AND WASTE

RECIRCULATE AND RECYCLE

- Turn on the Self-Priming MXR331 Pump.
- Run system for 30 minutes.
- Occasionally stop to check the filter bag to see if it's full.
- Remove the filter bag and let it drip dry for proper disposal.
- Depending on how much solids are in your MX360, you might need more than 1 filter.

*Note: please ensure that the MX360 unit is on the recommended level.

